


Installing **CONNECTOR BOARD** and **PAUSE MEMORY** for A700

Before installing you have the possibility to choose between two different modes for Pause Memory A700:

Jumper = small red bridge connector on the board

1. **Standardfunction**


Jumper on **BOTH** pins
(as delivered):

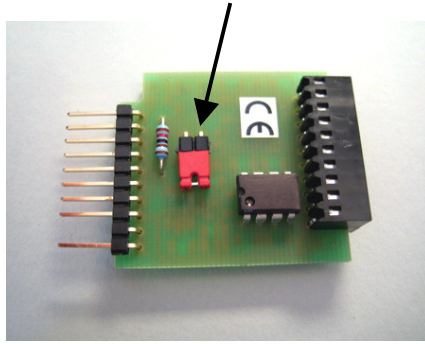

- recording starts immediately
- just pause memory is working.
- Pressing any button initiates the desired reel movement

2. **special function**


Jumper **just** to **ONE**
of the pins:

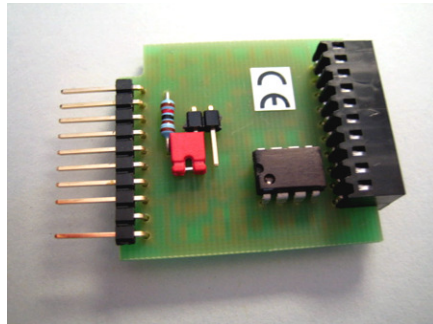


- Connecting the jumper to one pin, you can switch from PAUSE to PLAY or REC, preventing the A700 from starting to run.
- Recording starts without a clicking sound.
- Reel funktion PLAY or REC is started then by pressing PAUSE button again.

Unscrew the 8 phillips screws on the backside of the A700 case. Tilt the lid a little when taking it off.



This connector is to be pulled out

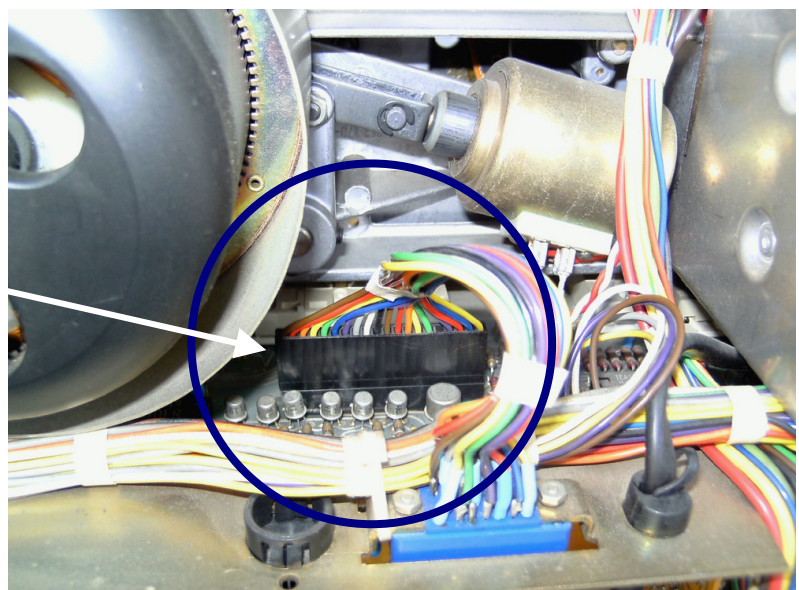

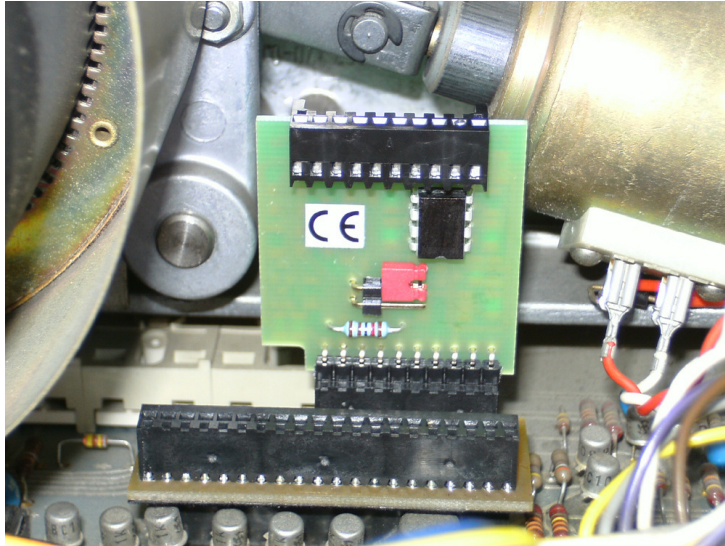

Carefully plug in the A700 connector board instead with plugged-in Pause Memory

Take the loosely hanging connector and carefully plug it in the A700 adapter board

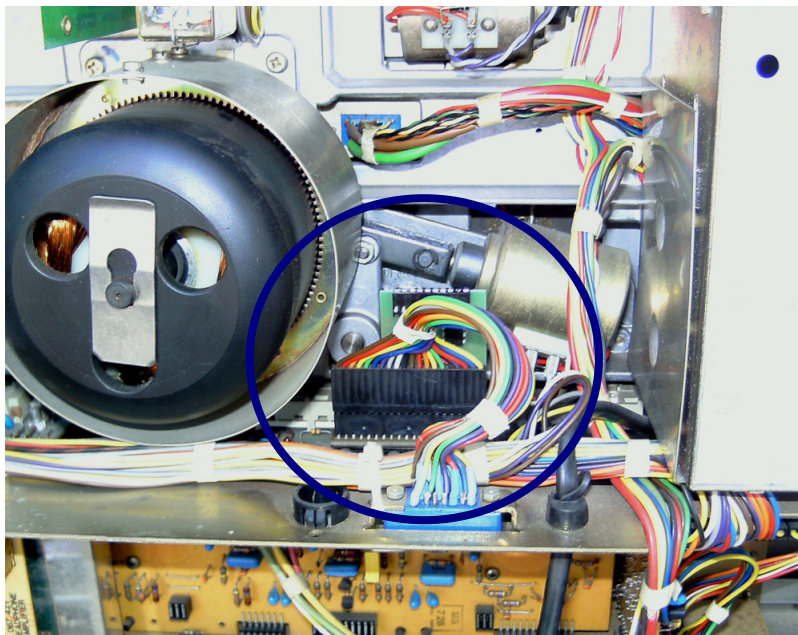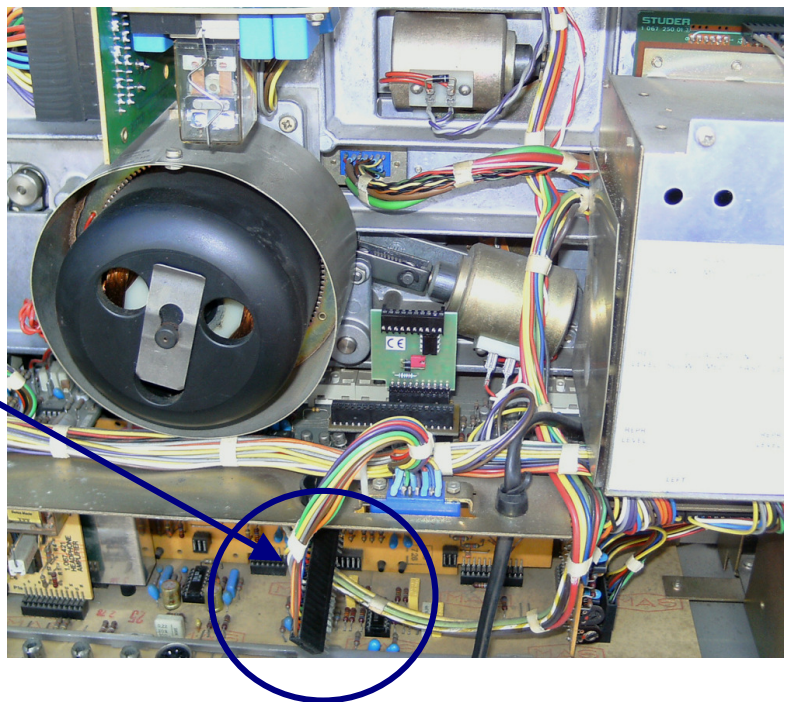

**installing complete –
enjoy your new
Pause Memory !**