

Installing Pievox Mute in Revox A78 Amplifier

Attention:



Only work in the amplifier with disconnected mains connector !

Version A78 Mute for A78 Verstärker contains mounted cables to the switchboard colored green and brown

The white wires are for AC voltage, so you are free to connect it.

1.Step

Desolder the green and brown cable from the switchboard

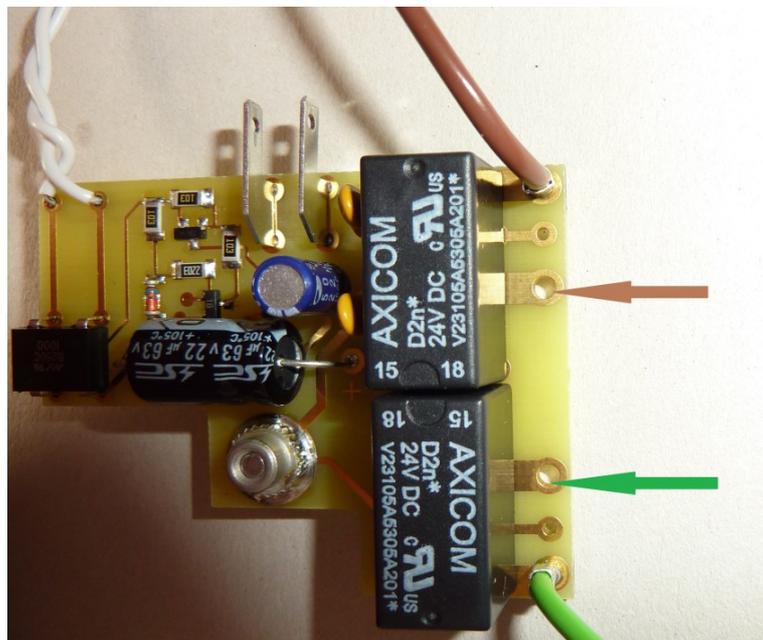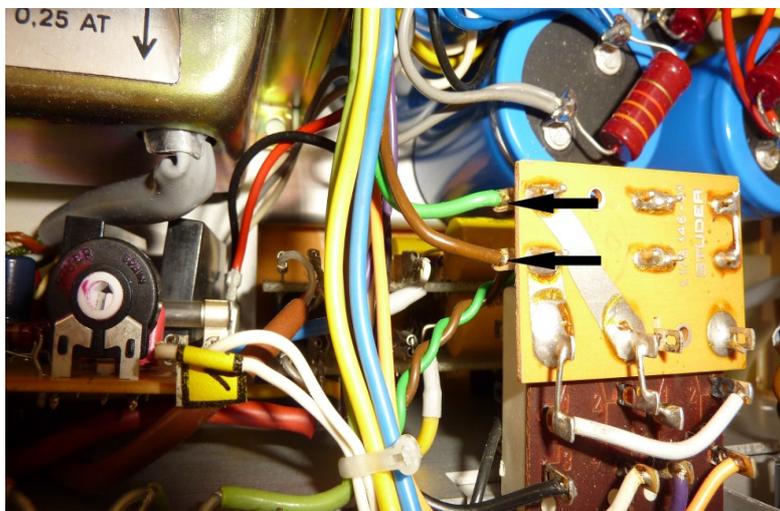


2. Step

Solder the short wires from the mute PCB to the solder lugs on the switchboard
Screw A78 Mute PCB on the transformer.

3. Step

Pull the white cables from the Supply PCB and push it on the flatconnectors on the Mute PCB.

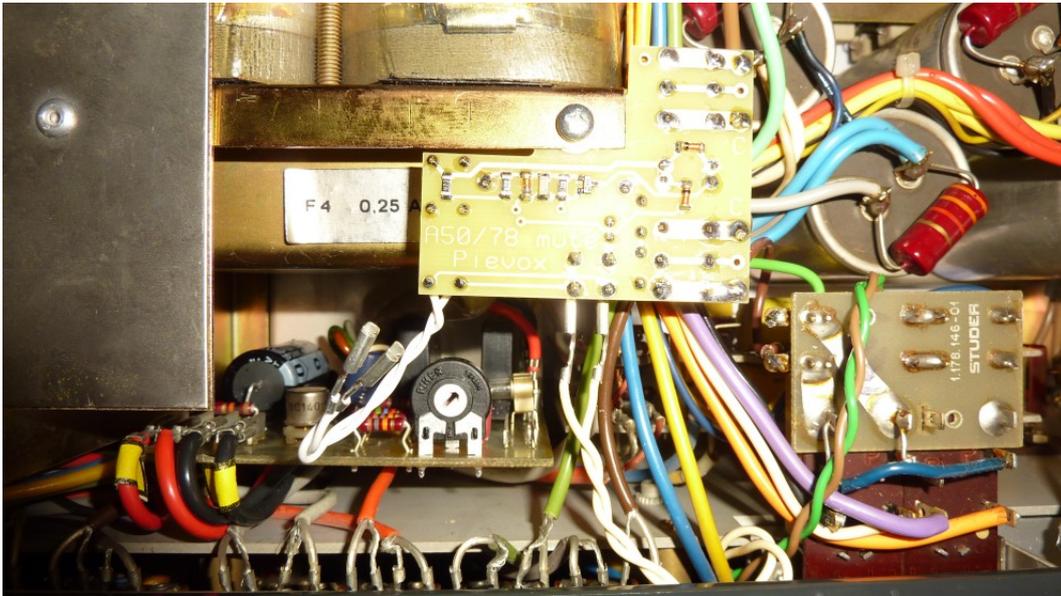

4. Step

Take the white cables from Mute PCB and push it on the Supply PCB flat connectors .

